

Specifications and Warranty


Warranty information is provided in the *Regulatory Information, Specifications, and Warranty document* (p/n 86.0221.00), which is available in the Document Library at www.a-dec.com.

A-dec Headquarters
2601 Crestview Drive
Newberg, OR 97132 USA
Tel: 1.800.547.1883 Within USA/Canada
Tel: 1.503.538.7478 Outside USA/Canada
Fax: 1.503.538.0276
www.a-dec.com

A-dec Inc. makes no warranty of any kind with regard to the content in this document including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose.



86.0559.00 Rev B
Copyright 2015 A-dec Inc.
All rights reserved.

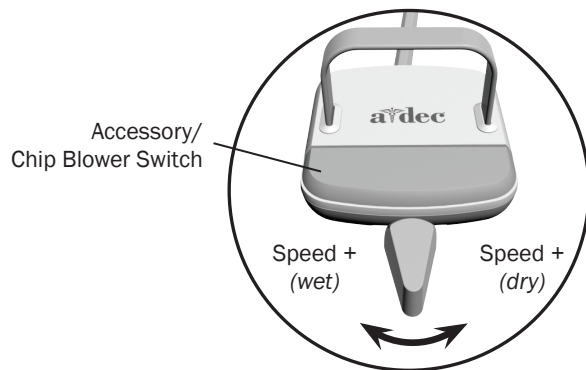

NOTE The lever foot control function can be reversed by a technician (change left direction to dry, right direction to wet). For more details, contact your authorized A-dec dealer.



A-dec Lever Foot Control

Overview

The foot control regulates drive air to the active handpiece and it provides an air signal that activates air coolant and water coolant flow.

The accessory/chip blower switch activates an accessory function or the chip blower. The chip blower sends a jet of air through the handpiece without activating the handpiece bur. The accessory function depends on your integrated accessory device. For more details, contact your authorized A-dec dealer.



Handpiece Activation and Operation

To activate a handpiece, lift it from the holder or pull the whip forward. Use the foot control to perform the desired handpiece operation.

Operation	Procedure
Run a handpiece with water coolant.	Move the lever to the left. Move farther to increase speed.
Run a handpiece without water coolant.	Move the lever to the right. Move farther to increase speed.
Run the optional accessory or chip blower.	Press the accessory/chip blower switch.
Operate the intraoral camera.	Move the lever to the left or right to capture an image.



NOTE For handpiece adjustment information, refer to the instructions for use that came with your delivery system.